

## Table of Contents

<b>BCM12 Battery Charge Manager</b> .....	3
<b><i>Important Bulletins</i></b> .....	3
Foretravel Bulletin Number: B003100.002 .....	3
Foretravel Bulletin Number: B003100.003 .....	3



# BCM12 Battery Charge Manager

Monitors the state of charge of a battery bank to activate the charging system to ensure full recharging. Can trigger any type of charging system including line chargers and engine-generators. Operates on both 12 and 24V battery bank systems.

The high and low set points to begin and end the charging cycle are adjustable within a range of values.



[Dyna-Gen BCM 12 Installation Manual](#)

## Important Bulletins

### Foretravel Bulletin Number: B003100.002

When installing a Battery Charge Monitor (BCM-12) for the operation of the auto start feature on generators, the parameters of the potentiometers must be adjusted to the following:

Max run timer	2.34 vdc	4 hours					
Low set point	2.2 vdc	12.2 vdc					
High set point	4.0 vdc	14.0 vdc					
<b>Dip Switch Setting (delay on time) 2 Minuets</b>							
1	2	3	4	5	6	7	8
ON	off	ON	off	off	off	off	off

### Foretravel Bulletin Number: B003100.003

Upon installation of the updated Dyna-Gen module, a distinction must be made of the type engine used in the generator.

The updated module has a preheat default setting of 8 seconds. This is accomplished by a small black jumper that makes a loop out of the potting on the module board. By leaving this wire intact, the unit will automatically set preheat to 8 seconds. Clipping this loop will double the time to 16 seconds.

Settings are as follows:

1. Isuzu engines are to be left at the default setting of 8 seconds.
2. Kubota engines are to be set at 16 seconds by clipping the loop.

From:  
<https://wiki.foreforums.com/> - Foretravel Wiki

Permanent link:  
<https://wiki.foreforums.com/technical:electrical:battery:bcm12>

Last update: 2025/03/10 10:27



